



A Watch You Can Trust

**INSTRUCTION MANUAL FOR
WATCH CALIBRE
W209**



WARNING



THIS PRODUCT CONTAINS A BUTTON BATTERY

If swallowed or placed inside any part of the body, the battery can cause severe or fatal injuries within 2 hours or less.

Button batteries are hazardous whether new or used. Keep batteries out of reach of children.

If you think the battery may have been swallowed or placed inside any part of the body, seek immediate medical attention. Contact the Australian

Poisons Information Centre immediately on 13 11 26

(New Zealand 0800 764 766) for 24 / 7 fast, expert advice.



■ CHARACTERISTICS

- 1. Time:** Hour and minutes are displayed in the time display. Seconds are displayed in the second display.
- 2. Calendar display:** Month and date can be displayed. Calendar adjusts automatically for odd and even months except February of leap years.

■ DISPLAY AND BUTTON OPERATION


Hour Colon Minute



Button A: Selection of the digits to be adjusted in the time/calendar setting function.

Button B:

- 1) In the time display, each press of button "B" changes the display as follows:

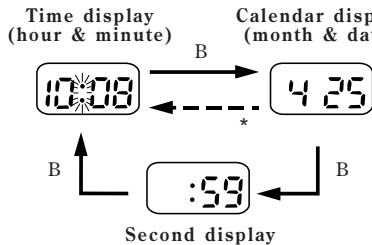


* The calendar display will return to the time (hour and minute) display automatically after 3 seconds.

- 2) Setting the desired digits to be adjusted in the time/calendar setting function.

Notes:

In the time display, if button "A" is pressed once, the time display and calendar display will change alternately every 2 seconds.

* Press button "A" 5 times to return to the time display.

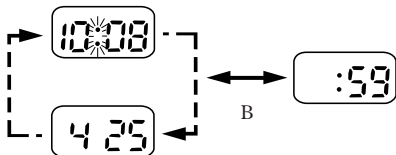


* If button "B" is pressed when the time and calendar displays are being changed alternately, the second display will be shown. If button "B" is pressed again, the alternately changing displays will appear again.

* When pressing button "A", use the tip of a ball-point pen or something which has a pointed tip.

■ HOW TO SET THE TIME AND CALENDAR

1. While the time display is shown, press button "A" twice. The time/calendar setting function will be activated displaying the digit representing the month. The digits to be adjusted will appear in the following order with each press of button "A".

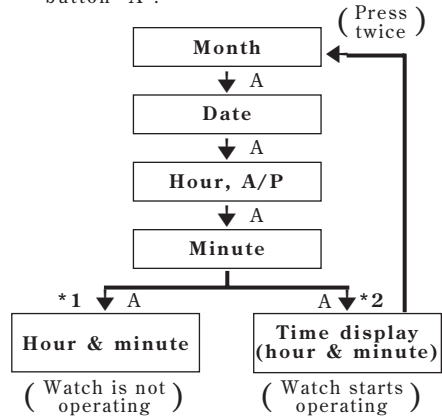

2. Press button "B" to set the time and calendar. One digit is advanced with each press of button "B". Digits advance quickly by keeping the button pressed.

*1 After adjusting the minute digits, press button "A". The hour and minute display will be shown but the watch will not start operating. (The colon mark stops flashing)

Press button "B" in accordance with any exact time signal (on the radio, TV or telephone). The seconds will be reset to "00" and start immediately.

*2 When the minute digits need not be adjusted, press button "A" to return to the time display.

Notes:

1. While setting the hour, be sure to check that AM (A)/PM (P) is set correctly.
2. When setting the minutes, be sure to set the time 1 to 2 minutes ahead and wait for the time signal to set the time exactly.

■ LUMIBRITE WATCH

(dial, hands, buttons, case, bezel, strap, etc.)



☆ If your watch is a LORUS LUMIBRITE watch, it has following features.

LORUS LUMIBRITE watches absorb and store light energy from natural and artificial light sources and emit light in the dark. They are made of environmentally friendly material, and therefore, are harmless to human beings and the environment.

- With a full charge, LORUS LUMIBRITE watches glow in the dark hours longer than conventional luminous watches of this type. If exposed to a light of more than 500 lux (i.e., the brightness of a typical office) for approximately 10 minutes, or direct sunlight for 2 minutes, they will glow for hours.
- Since LORUS LUMIBRITE watches emit the light they store, the brightness will decrease gradually over time. The length of time they will glow may also differ slightly depending on such factors as the brightness of and distance from the light source used to charge the watch.

■ BATTERY CHANGE

The miniature battery SEIKO SR626SW, MAXELL SR626SW, SONY SR626SW, Matsushita SR626SW or EVEREADY 377 which powers your watch should last approximately 2 years. However, because the battery is inserted at the factory, the actual life of the battery once in your possession may be less than 2 years. Be sure to replace the battery to prevent any possible malfunction as soon as it runs down. To replace the battery, we recommend taking the watch to a local watch repair shop.

■ CARE OF YOUR LORUS WATCH

• BATTERY



CAUTION

Do not expose the old battery to fire or recharge it. Keep it at a place beyond the reach of children. If a child swallows it, consult a doctor immediately.

• WATER RESISTANT

Condition of use Indication on the dial/ case back	Accidental contact with water, such as splashes and rain	Swimming and taking a shower	Skin diving	Scuba diving
No indication	NO	NO	NO	NO
WATER RESISTANT	YES	NO	NO	NO
WATER RESISTANT (50 M/5 BAR)*	YES	YES	NO	NO
WATER RESISTANT (100 M/10 BAR or above)*	YES	YES	YES	NO

* If your watch is 200 M/20 BAR, 100 M/10 BAR or 50 M/5 BAR water resistant, it is so indicated on the dial/case back.

- Do not operate the buttons when the watch is wet.
- If the watch is exposed to salt water, rinse it in fresh water and then wipe it thoroughly dry.

Caution:

Leather straps are not water resistant except so indicated, even if the watch head is water resistant.

• ALLERGIC REACTION

Because the case and band touch the skin directly, it is important to clean them regularly. If not, shirt sleeves may be stained and those with delicate skin may develop a rash. Please wear the watch with some play to avoid any possible allergic reaction. If you develop a rash on your wrist, stop wearing and consult a physician.

• MAGNETISM

Your watch will not be affected by magnetism generated by household electric appliances.

• SHOCKS AND VIBRATIONS

Your watch may be worn for normal sports activities, but be careful not to drop it or hit it on hard surfaces.

• TEMPERATURE

Your watch is preadjusted so that constant accuracy may be insured at normal temperature.

■ SERVICE

When your LORUS watch requires repair or servicing, please see the enclosed WARRANTY/GUARANTEE.